


# Stove Media Wall

Integrated fixings must be tightened at an angle, as shown below

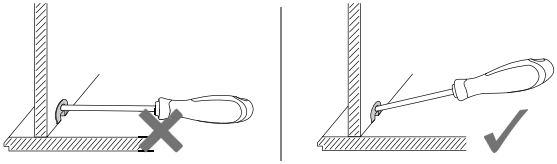

**1.**

Insert 6 x CAM Dowels into the Back Panel. Then fix the 2 X Legs to the Back Panel.

**2.**

Place the base on the floor in the desired position and insert the hearth.

Insert 4 x dowels into the top of the base.

**3.**

Feed an extension lead through the cutout in the back panel and plug the stove in. Then position the stove as required.

Plug in the downlights & switch and hang over the FRONT of the back panel, these will be fitted later.

**4.**

Using a spirit level so the lines are straight. Measure 1270mm from the top of the base and mark a line 18mm inward of the outer face of the base on the wall. Do this on both sides of the base.

**5.**

Using the appropriate fixings, securely fit 2 x timber battens to the inside of the lines marked on the wall.

**6.**

With help, carefully lift the top box then lower and sit the top box onto the dowels on top of the base.

**Once in position, to prevent the top box falling, do not leave unattended until it has been fixed to the wall.**

**7.**

Keep the top box pressed firmly against the wall. Then, using the 4 x large screws provided, screw into the pre-drilled holes in the side of the top box to fix the top box in position.

Ensure the screws are tight and the top box is secure before releasing.

**8.**

Fit the downlights and switch into the top box. Please refer to the downlight instructions to install these.

**9.**

Place the stove pipe in position.

**10.** Your Media Wall is now ready to prepare and paint.