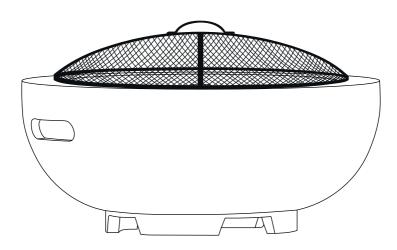
Field & Flame

Solid Fuel Fire Pit



*Image for illustrative purposes only

This manual is for the following models:				
Geometric	Bowl	GB-2032	GB-22059	

www.firedupcorporation.com/manual

SAFETY INSTRUCTIONS



WARNING

Risk of suffocation due to carbon monoxide. This appliance can product carbon monodixe which has no odour. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

- This fire pit is not for commercial use.
- For outdoor use only.
- This fire pit should only be used by adults. All children and pets should be kept at a safe distance.
- Do NOT use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as a rapid increase in temperature could damage the fire bowl.
- This fire pit is only suitable for use with charcoal, untreated wood or dry logs. Do NOT use coal.
- Do NOT use this fire pit until completely assembled and all parts are securely fastened and tightened.
- Do NOT use the fire pit on surfaces made of wood (such as decking) or any other flammable surfaces such as dry grass, woodchip or leaves.
- Always empty the fire pit after use. Leave a thin layer of ash to protect the fire bowl. Do NOT remove ash or charcoal until they are completely extinguished.
- Do NOT touch the fire pit until it has cooled completely. Wear heat-resistant gloves during use.
- Do NOT touch or move the fire pit during use.
- Do NOT attempt to store the fire pit until all ash and charcoal is completely extinguished.
- Always use a safety tool and heat-resistant gloves when adding or moving fuel.
- Do NOT leave a burning fire unattended.
- Fire hazard! Hot embers may emit while in use.
- Do NOT overload the fire bowl with fuel. If any portion of the fire bowl glows red, it is overloaded.
- Do NOT add additional fuel until the fire has burned down.
- Do NOT burn fuel directly on the fire bowl base. The log grate should be used.
- Keep the fuel away from the walls of the fire bowl, the high temperatures may damage it.
- Avoid inhaling smoke from the fire and avoid getting it into the eyes.
- Always thoroughly inspect the fire pit before and after use.
- A slight discolouration may occur in the finish of the fire bowl after use.
- Spark off a small fire and let it grow slowly. Sudden heat cean lead to cracks in the construction.
- Keep these instructions for future reference.

CAUTION


DO NOT USE SPIRITS OR PETROL FOR LIGHTING OR RE-LIGHTING THE FIRE

WARNING

Risk of burns! This apppliance has a naked flame. A suitable fire guard should be used to protect children and the elderly.

SPECIAL INSTRUCTIONS FOR GRILLS

- Do NOT place food on the grill until the fuel is covered with a layer of ash.
- The fire pit becomes very hot and must not be moved during use.
- Do not use the fire pit in enclosed spaces/rooms.
- Do NOT use spirits or petrol for ignition or re-ignition. Only use ignition aids in accordance with EN 1860-3.
- Keep children and pets away from the fire pit.

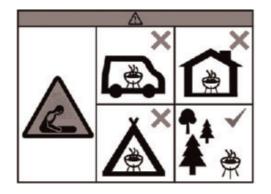

PARTS IDENTIFICATION



 
1 - Fire Guard

2 - Grill

3 - Log Grate

4 - Fire Bowl







6 - Fire Pit Tool

ASSEMBLY

- 1. Place the fire pit body (5) on a firm, flat, level and heat-resistant surface, away from flammable objects.
- 2. Place the fire bowl (4) in the fire pit body (5).
- 3. Place the log grate (3) in the fire bowl (4).
- 4. Place the grill (2) on the fire bowl (4).
- 5. Place the fire guard (1) on the fire bowl (4).



OPERATION

IGNITING THE FIRE

- Ensure the fire pit is positioned on a permmnent flat, level, heat resistant, nonflammable surface away from flammable items.
- Place paper or dry kindling in the centre of the log grate.
- Ignite the paper/kindling.

Note: Light a small fire first and then let it slowly grow. If the heat develops too quickly, cracks may occur in the construction.

STOKING THE FIRE

- Add fuel to the fire bowl when the flame begins to dwindle. Do NOT overload with fuel, two or three logs is sufficient.
- When moving logs, use a safety tool to avoid the risk of burns.

EXTINGUISHING

- To extinguish, stop adding fuel and allow the fire to die down OR douse with sand. Do NOT use water as this may damage the fire bowl.
- Ensure the embers are extinguished completely before moving or storing the fire pit.

USE AS A BBQ

- Before cooking, ensure the girll and cooking utensils are clean.
- Add around 500g of charcoal onto the log grate and ignite.
- Place the frill onto the fire bowl and ensure it is stable.
- Do NOT cook before the fue has a coating of ash.
- Ensure all food is cooked thuroughly before consuming.
- After cooking, do NOT remove the grill until it has cooled completely.
- After cooking, always clean the grill and cooking utensils.

CLEANING & CARE



CAUTION

Risk of burns! Allow the fire pit to cool completely before inspecting it for damage or cleaning it.

• The fire bowl should be inspected regularly to ensure product safety and increase the products life.

CLEANING

• The fire bowl should be cleaned after each use to ensure a longer product life. Do NOT use oven cleaner or abraisive cleaners as they will damage the product.

CARE INSTRUCTIONS

The fire bowl is made of steel and therefore the surface will age and develop surface rust when it is placed outside and after use. This is to be expected, it does not affect use and is not a product fault. Please see instructions below on how to refresh the paint finish.

- Remove loose paint and rust using a wire brush when needed and re-paint using a high temperature paint, resistant to at least 600°C.
- To help reduce surface rust, rub the fire bowl with an oily rag after each use.

STORAGE

- When not in use, cover the fire pit with a cover to help protect it from the weather. Ensure the product has cooled completely before covering and storing.
- Store the fire pit in a dry location to maximise the products life.

GUARANTEE

For your convenience, you are not required to complete a form and return it to us in order to validate your guarantee. However, please ensure that you retain your receipt which will act as both proof of purchase and a guarantee validation document. We recommend that you attach your receipt to this documentation.

Your product carries a 12 month guarantee from the date of original purchase (or as otherwise provided in writing at point of purchase). If your product fails to operate to its specification, due to faulty workmanship or materials during the guarantee period, we will either repair or replace the product. We will use our discretion to determine whether to offer a repair or provide a replacement. The product will not be covered by the guarantee if it has been misused, transformed, modified or altered in any way.

If your product fails within the guarantee period please ensure that you have all necessary documentation available including proof or purchase (receipt or invoice with serial number, location and date of purchase) in addition to all original undamaged packaging and leaflets etc. It is strongly recommended that you inspect your product carefully before it is used or installed. For full details of your product you should refer to the instruction manual which accompanies the product. You are strongly advised to read this manual carefully in its entirety and to retain it for future reference.

This product guarantee does not affect your statutory rights.

CUSTOMER HELPLINE

) +44 (0) 3300 882 069

) customer.support@firedupcorporation.com



Fired Up Corporation Ltd Fired Up Buildings HD1 3LF, UK

www.firedupcorporation.com