



Contents



#1 x 2



#3 x 2



#5 x 2



#7 x 1



#2 x 1



#4 x 2



#6 x 2



#8 x 1



Crystals



Natural Grey Slate



Vermiculite



Scan to Watch
Fuel Bed Video


1. Remove the glass to access the fuel bed. See back page for how to remove the glass.

2.



- Lay the crystals towards the back of the fuel bed.
- Spread the vermiculite around the fuel bed.
- Lay the slate around the front and sides of the fuel bed.

3.

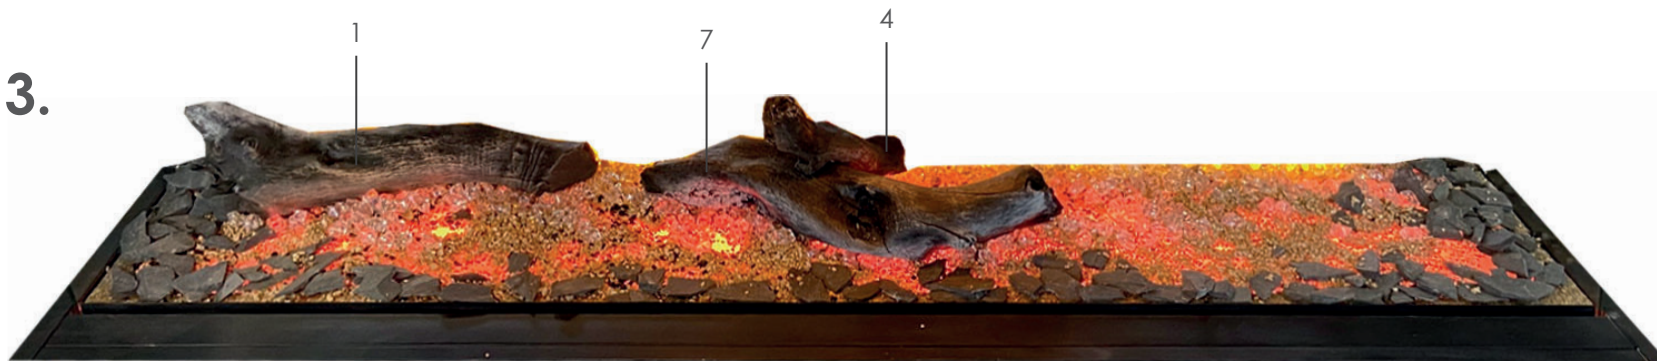

4.





Removing Front Glass

To remove the front glass and access the fuel bed, remove 2 x brackets located under the hood of the fire. Tilt glass forward to remove.

